

### QCY Crossky GTR 开放式真无线耳机



使用前,请下载安装QCY手机APP客户端 以获得更便捷的耳机操控体验

# 认识耳机

#### 耳机佩戴

本说明书中的图片均为示意图,可能与实物有偏差,请以实物为准。



 




3.耳柄紧贴耳廊上方滑入,固定至耳后 4.旋转前腔至舒适角度,最大可调角度90%

#### 耳机配对

开盖,耳机会自动开机,打开手机蓝牙搜索"QCY Crossky GTR"并点击 连接 (若有连接记录,开机会自动重连最后连接的设备)



#### 一键进入配对模式

1.耳机已经与手机配对。

2.耳机放盒子里,打开充电盒盖子,长按充电盒按键3秒至充电盒白灯 快闪,耳机断开与手机的连接,取出耳机,进入配对模式。

#### 恢复出厂设置

双耳在充电盒里,长按充电盒按键10秒,耳机闪5次白灯,复位完成后耳机开机。



亮白灯5秒: 充电盒中高电量

**允电量允电** 充电中:红色指示灯长亮

## 功能操作



◎ 开 机:长按触控面板约1.5秒 ◎ 关 机:耳机放入充电盒后合上盖子

€ 接听/挂断:双击触控面板

€ 拒接电话:长按触控面板约1.5秒 № 上 一 曲: 长按左触控面板约1.5秒 → 下 一 曲: 长按右触控面板约1.5秒 语音互动:三击左耳触控面板 ☞ 播放/暂停:双击触控面板播放/暂停

# QCY蓝牙耳机售后服务

QCY區牙耳利售后服务系第:严格按照(中华人民共和區消费者权益保护法)、《中华人民共和国产品质量法》 环门售息三包服务,服务内容如下。 在三包有效时,您可见物等快证收据本规定享受免费的修服。更换,退货的权利。 1。自觉购之日起7日内,本产品出版效率,经由0个14后服务中心确定为产品质量的后,可享受偿理、更换、退货的服务。 自然购之日起7日内,本产品出版效率,经由0个14后服务中心确定为产品质量的后,可享受偿理更更转的服务。 3。自您购之日起10个月内,本产品出版效率,经由0个14后服务中心确定为产品质量问题,可享受修理的服务。

销售单位 \_\_

告目报务与支持 保管联 自产品购买之日起12个月情妥善保管购买凭证。 免费股务:在于品条等期外,凡属产品本身须重与证的效应。请用户凭购买凭证与经销商取得联系以享受售后服务。 如有任何产品的表现就是印列到完产品资重本身,则不在保险范围内。有下列南形者不属于保修范围内: 1. 因天灾、地震、雷击、异常电压、环境因素而发生之故障或级损的。 2. 自行成委托来股票,授权保经工师转加、资本股票,使用 2. 自行成委托来股票,授权保经工师转加、资本股票申标下零件。 3. 未按使用手册操作或因人为使用不当而造成损坏者,如产品浸水、腐蚀、掉落、挤压或露在异常温湿度环境下。

三包凭证 产品信息: \_\_\_\_\_ 订单编号 .\_\_\_\_ 用户信息: 用户姓名 \_ \_ \_ \_ 联系电话 \_ \_ \_ \_ \_ ... 用户地址

# FAQ

- 1.Q: 只有一只耳机有声音怎么解决? A: 将两只耳机放回充电仓关盖,再重新取出,查看双耳是否都有声音,若还是只有单 只耳机有声音,请对两只耳机恢复出厂设置。
- 2.Q: 手机提示无法连接怎么解决? A: 将手机上的配对记录删除,删除后重新进行搜索配对连 接即可。 3.Q:听歌/通话没声音怎么解决? A:安卓手机在蓝牙连接名字的右边有个设置图标,点击进入,关闭手机音频和媒体音频,再重新开启,若还是无声,请将耳机重新与手机配对连接。
- 4.Q:为什么视频/游戏有延迟? A:受使用环境、网络、手机编解码等因素的影响,会引起手机传送音频数据到耳机时 有不同程度的延迟。

5.Q: 听到的声音卡顿/断续怎么解决? A: 在使用时若周围有大量的 Wi-Fi、5G/4G 信号、大功率电器等等产生干扰,可能会引起卡顿、断续的情况,换个环境或者重新配对连接就可以解决了。

若有售后服务需求,请联系客服 电话: 4008-306-708 网址: www.qcy.com 地址: 广东省东莞市道滘镇粤晖路325号

# 产品有害物质名称及含量

iii ob)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯酸 (PBDE)
X	0	_			
	~	0	0	0	0
×	0	0	0	0	0
X	0	0	0	0	0
X	0	0	0	0	0
	11364 勿质在i	11364的规定	( 0 0 11364的规定编制	X O O O 11364的规定编制	X 0 0 0 0

GB/T 26572 规定的限量要求。











# 提示

- 1. 使用产品前请仔细阅读本使用说明书并请妥善保管;
- 1. 使用"面即调订通问以本使用放射为扩展支替体管。 2. 首次使用时,请先将本产品充满电; 3. 如果产品长期格过2个星期不用,请对其充电; 4. 必须选择正规厂家生产且经过国家CCC认证的充电器; 5. 若手机无法搜索到蓝牙耳机,请将蓝牙耳机重新进入配对模式或将蓝牙耳机恢复出厂设置,若手机程序出错,请把手机蓝牙关闭再开启或重启手机。
- 请勿以任何理由拆除或维修改装耳机,否则可能会导致起火,电子击穿甚至彻底损坏本品; 请勿将产品置于温度过低或过高(0℃以下或45℃以上的环境下); 请避免靠近儿童或动物的眼睛使用产品指示灯;
- 请勿在雷暴天气下使用该产品,雷暴可导致本产品工作不正常,并增加触电的危险; - 请勿用油及其他挥发性液体擦拭本产品;


注意:长时间使用耳机可能会造成听力损害,请合理安排使用时间。

# QCY Crossky GTR

Open Truly Wireless Earbuds



For better using experience, please scan to download QCY app before start-up.

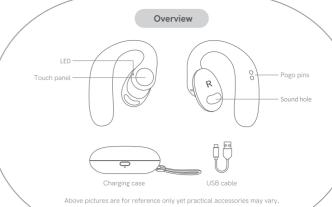

#### How to Wear









 


3. Rotate hook along pinna to the back of ear  $\,$ 



#### How to Connect


ower them on. On phone, search QCY Crossky GTR nect. (Earbuds will auto reconnect to the last device



#### One Press to Turn Connectable

#### Factory Setting

 Push earbuds into case and keep pressing button on case for 10s or until LED blinks white 5 times to reset them before they auto power on.



(Open lid or press button on case) LED turns on white for 5s: middle or high battery
LED turns on red for 5s: low battery

LED will glow solid red when case

# Instructions



- Power-on: keep touching either panel for 1.5s
- Power-off: push earbuds back in case Answer/end call: double touch either panel
- Ignore call: keep touching either panel for 1.5s
- Skip track backward: keep touching left panel for 1.5s (H) Skip track forward: keep touching right panel for 1,5s
- Voice assistant: triple touch left panel Playback/pause: double touch either panel
- Low-latency mode: triple touch right panel

# Warranty Card

ing any defects caused by quality issues occur within the warranty period , please take ranty card and purchase receipts to your distributor for free exchange service.

User's Addre

Free exchange service will not be accessed under following circumstance
1. Damages caused unauthorized disassembly.
2. Defects or physical damages caused by leaking or dropping off,
3. Damages by act of God. Supposing your Item is within any damages or
defects except the above circumstances, please return to us or your
distributor for free repairing.

# FCC Statement

This equipment has been tested and found to comply with the imits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

and used in accordance with the instructions, may cause narminimentations.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Consult the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (117his device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# Tips

- 1. Before using the earbuds, please read the manual carefully and keep it for
- future references.

  2. The earbuds need to be fully charged prior to first-time use.

  3. If the earbuds are left unused for over two weeks, please recharge.

  4. Please use the chargers made by qualified manufacturer.

  5. If earbuds fail to be found by phone, please re-turn them connectable or restore factory settings. If a program error of phone occurs, please turn off and on Bluetooth function or reboot the phone.

# Caveats

- 1. Never disassemble or modify your earbuds for any reasons to avoid any damages and danger.

  2. Do not store the earbuds in extreme temperatures (under 0°C or over 45°C).
- 3. Avoid using the indicator close to the eyes of children or animals,
  4. Do not use the earbuds during a thunderstorm to avoid dysfunction and increasing risk of electricishock.
- risk of electricsnock.

  5. Do not use harsh chemicals or strong detergents to clean the earbuds.

  Note: please do not use earbuds for a long time as may damage your hearing.









